


MW/LW/FM/AIR MARINE BAND RADIO
Model SAB9



INSTRUCTION MANUAL

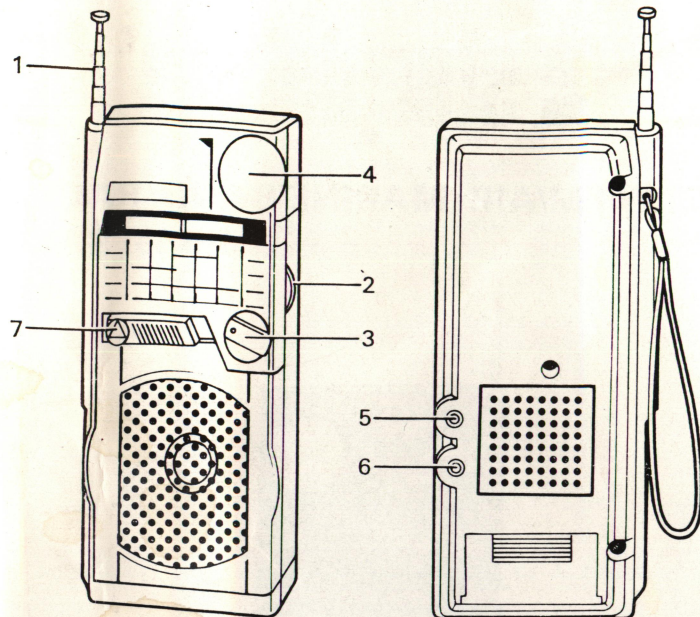

- 1. Telescopic aerial
- 2. Fine Tuning
- 3. ON/OFF knob
Volume control

- 4. Tuning knob
- 5. D.C. socket
- 6. Headphone socket
- 7. Function knob

OPERATION

REMOVE THE BATTERY COMPARTMENT COVER AND INSERT 4 X 1.5V BATTERIES. MAKE SURE THAT THE BATTERIES ARE INSERTED CORRECTLY, OBSERVING THE CORRECT POLARITY, AS OTHERWISE THE RADIO MAY BE DAMAGED.

NOTE: WEAK OR DEAD BATTERIES MAY LEAK AND DAMAGE THE RADIO. ALWAYS REMOVE THE BATTERIES WHEN THE RADIO IS NOT TO BE USED FOR LONG PERIODS OF TIME.

VOLUME CONTROL —ON/OFF KNOB

SWITCH ON OR OFF BY USING THE ON/OFF + VOLUME CONTROL KNOB. WHEN SWITCHING OFF —,TURN THE KNOB IN AN ANTI-CLOCKWISE DIRECTION — YOU WILL HEAR A 'CLICK' WHEN THE RADIO IS FULLY TURNED OFF.

TELESCOPIC AERIAL

BEST RECEPTION IS OBTAINED WITH THE AERIAL FULLY EXTENDED. WHEN RECEIVING STRONG TRANSMISSIONS IT MAY BE NECESSARY TO SHORTEN THE AERIAL SLIGHTLY IN ORDER TO ELIMINATE INTERFERENCE.

TUNING

YOUR RADIO CAN RECEIVE **MW/LW/FM/AIR/MARINE** BAND FREQUENCIES. BY TURNING THE TUNING KNOB YOU CAN REACH THE DESIRED FREQUENCY RANGE AND BY TURNING THE VOLUME CONTROL KNOB, THE DESIRED VOLUME.

FINE TUNING

USE THIS CONTROL FOR MORE PRECISE TUNING ON AIRBAND

EARPHONE SOCKET

BY INSERTING THE EARPHONE INTO THE SOCKET THE BUILT-IN SPEAKER IS AUTOMATICALLY SWITCHED OFF.

NOTE:

KEEP THE RADIO AWAY FROM HEAT (RADIATORS, WINDOWS HEATED BY THE SUN, HEAT INSIDE A CAR BOOT, ETC). REMOVE THE BATTERIES WHEN THE RADIO IS NOT IN USE.